

# TempTale®4

## USB Interface Plus Reader

The USB Interface Plus Reader provides the communications link between a TempTale®4 monitor and a standard USB port. It is used for downloading time-and-temperature data recorded by the monitor to your PC for viewing, analysis and archiving.

The USB Interface Plus Reader includes a software CD containing a USB driver that allows it to work on Windows®-based PCs. Once the USB driver is installed, the USB driver creates a virtual COM port on the PC, ready for connection to the USB Interface Plus Reader.



### Product Specifications

|                                    |                                                                                                                                                                                                                                                                                                                                                                                           |
|------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>For Use With</b>                | All TempTale4 Monitors                                                                                                                                                                                                                                                                                                                                                                    |
| <b>PC Connection</b>               | USB Port                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Minimum System Requirements</b> | PC with <ul style="list-style-type: none"> <li>• Windows 7 (32- and 64-bit), Windows Vista® (32- and 64-bit), or Windows XP®</li> <li>• CD-ROM drive</li> <li>• USB Port</li> <li>• One or more of the following Sensitech applications:               <ul style="list-style-type: none"> <li>– TempTale Manager Desktop</li> <li>– ColdStream® Cold Chain Manager</li> </ul> </li> </ul> |
| <b>Cable Length</b>                | 1m                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Typical Dimensions</b>          | 4.6" L x 2.75" W x 1.4"H<br>11.7cm L x 7.0cm W x 3.6cm H                                                                                                                                                                                                                                                                                                                                  |
| <b>Device Weight</b>               | 3.8oz (107.7 grams) (approx.)                                                                                                                                                                                                                                                                                                                                                             |

Sensitech Inc. is a leading provider of supply and cold chain visibility solutions that enable our customers – global leaders in the food, life sciences, and industrial markets – to track, monitor and protect the quality and integrity of their temperature-sensitive products across complex supply chains. Through its logistics security division, FreightWatch International, Sensitech also offers origin-to-destination services that provide customers with real-time cargo transparency, helping them to mitigate such risks as theft, diversion, counterfeiting, and chain of custody. Sensitech Inc. is an ISO 9001:2008 company based in Beverly, Mass., with more than 30 sales, service and distribution locations around the world. Sensitech is a part of UTC Climate, Controls & Security, a unit of United Technologies Corp., a leading provider to the aerospace and building systems industries worldwide. Visit [www.sensitech.com](http://www.sensitech.com) for additional information. © 2013. Sensitech Inc. All Rights Reserved. Unless otherwise indicated, all trademarks and service marks are the property of Sensitech Inc. Windows, Windows XP, and Windows Vista are registered trademarks of Microsoft Corporation in the United States and other countries.

[www.sensitech.com](http://www.sensitech.com)

5/13 00



Amsterdam Bangalore Boston Hong Kong Melbourne Santiago Shanghai

Sensitech Inc. • 800 Cummings Center • Suite 258X • Beverly, MA 01915-6197 • 1-800-843-8367 • +1-978-927-7033 • Fax: +1-978-921-2112 • [www.sensitech.com](http://www.sensitech.com)