

**Millions Depend on the Integrity of Your Product.
Sensitech's Mission is to Ensure that Integrity.**

The Tools That Turn Information Into Power



TempTale Manager®
Desktop Software



Data Management Services



RF Monitoring



TempTale®4 Monitor



TempTale®4 USB Monitor



TagAlert® Indicator

**RYAN® EZT
Strip Chart Recorder
Instructions For Use**

**For more information, contact our client services
group at 800-843-8367.**



The Ryan® EZT is offered in ranges of 5, 10, 20, 40, or 75 days and 90 Day High Temp (°F & °C). The three-part Notice of Shipment allows for easy documentation using a ballpoint pen or other firm tip writing instrument.

Operating Instructions

- Fill out the Notice of Shipment on the front of the instrument; the instrument number on the form matches the serial number on the instrument. Available fields include Date, Time, Order #, Product, Shipper, Receiver, Carrier, Vessel and Driver Signature.
- To start, pull tab from the side of the instrument. Moving white gear on the motor will be visible in the half-round view window beside the tab. Pulsing movement of gear insures unit is operational.
- To install in vehicle, remove cover from sticky tape on back of instrument and press instrument onto clean, smooth and dry surface away from doors or direct air blast. Or place instrument on top of lading.

To Remove Chart After Use

- Open the instrument by peeling off the silver security seal and pressing the button on top of instrument as shown to open the clam shell design. A broken seal indicates possible tampering. Report signs of tampering to your supervisor immediately.
- Remove spool by pulling upward. This will remove any chart remaining in dispenser. Peel tape to remove chart from spool.

