



TempTale Manager[®] Desktop 7.2.1 Download Instructions

Sensitech TempTale Manager[®] Desktop 7.2.1 (TTMD 7.2.1) is available for downloading on this page in a standard zip file format (.zip).

Getting Started

Before installing TempTale Manager[®] Desktop, confirm that your system meets the necessary hardware and software system requirements shown below, and then install the software by following the instructions in this section.

Minimum System Requirements

- Pentium III 650 MHz with 1 GB of RAM
- A hard drive with 250 MB available disk space
- .NET Framework 3.5 (Service Pack 1)
- Windows 7 Pro (32 or 64-bit), Vista Business (32 or 64-bit) or XP Pro operating systems
- A mouse or other pointing device
- For users downloading monitor data, a serial Interface Plus Reader connected to a COM port or a USB Interface Plus Reader directly connected to a USB port
- A VGA monitor (resolutions supported include: 1024 x 768, 1280 x 1024, 1400 x 1050, and 1680 x 1050)
- For users who need to print, a printer connected to a PC directly or through a network
- Administrator account for the computer

Software Installation

To install TempTale Manager[®] Desktop from the TTMD 7.2.1 Download page:

Close all running applications before beginning the installation, including the Microsoft Office Toolbar, and disable all anti-virus software and Norton Utilities.

1. Log on to the computer as **Administrator**. (You cannot install the software on a Windows based system without having Administrator access).
2. Click on the TTMD 7.2.1 download link.
3. Click **Save** in the **File Download** box.
4. Click **Open Folder** when download is complete.
5. Right click on the **TTMD7.2.1LS.zip** file and select **Extract All**.
6. Select a folder to Extract files to and click **Next**.
7. Click **Finish** when extraction is complete.
8. Navigate to **TTMD7.2.1LS.zip** folder that contains extracted files.
9. Double click on **TTMD7.2.1LS.zip** folder and open folder.
10. Double click the **Setup.exe** file.
11. When prompted to install the **Sensitech USB Interface Plus Reader Driver Set**, click **Install**.
12. When prompted to install the **Sensitech USB-RS232 Adaptor Driver Set**, click **Install**.
13. Click **OK** in the **Installation Successful** confirmation box.
14. In the **Choose Setup Language** dialog that opens, select a language from the drop-down menu, and then click **OK**. (The system automatically defaults to the language of your computer's operating system.)
15. The **InstallShield Wizard for TempTale Manager Desktop 7.2.1** opens.
16. If prompted to install .NET Framework 3.5, click **Yes**. Allow 2 to 5 minutes for installation to complete.
17. In the next window, accept the default installation directory, or click Change to browse to the directory in which you want TTMD installed. C:\Program Files\Sensitech\TempTale Manager Desktop is the default directory. Click **Next**.
18. In the next window, do one of the following, and then click **Next**.
 - a. Select Enabled if you want the system to open a Login window in which users must enter login ID and password before TTMD will launch.
 - b. Select Disabled if you want the system to bypass the Login window and launch TTMD automatically.

19. The next window enables you to revisit the previous windows to modify your installation settings. When you have completed your review and made the necessary modifications, click **Next**.
20. When you receive a message that installation was successful, click **Finish**.
21. The installation program adds an icon (application shortcut) to your desktop.
22. Click the icon to start TTMD.
23. If you selected Enabled in Step 12, the TTMD login window opens. Enter the following:

 Login: admin
 Password: password
24. 18. Click **Login** to open the application.

This completes the TTMD installation.