


ThermoAlert™ Indicator

Instructions for Use



sensitech.com

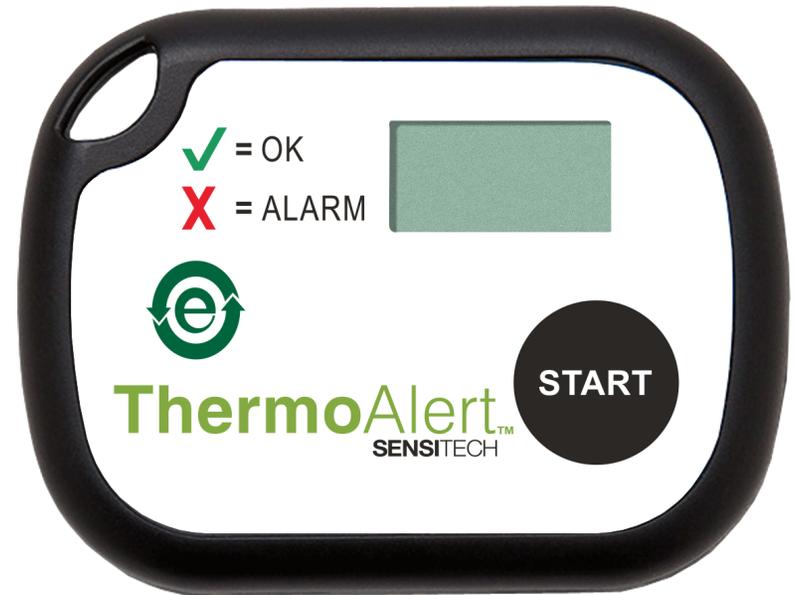

Sensitech Inc. • 800 Cummings Center, Suite 258X • Beverly, MA 01915-6197

+1-800-843-8367 • +1-978-927-7033 • Fax 978-921-2112 • sensitech.clientservices@carrier.com

© 2020 Carrier. All Rights Reserved.

T83001710 Rev. D • 24 Sep 2020

Starting a ThermoAlert™ Indicator

- Push the **START** button on the front of the device and hold it for approximately 3 seconds.
- The display will respond with a “✓” and flashing “♥” icon once per second. (Figure 1).
- Remove the back sticker label and affix the indicator to an instruction card or directly to a clean, dry surface on the product or package.
- After the start delay period has expired, the ThermoAlert will begin monitoring time-temperature alarm conditions.



Figure 1

Reading a ThermoAlert Indicator

- Once the package has arrived at its destination, remove the ThermoAlert indicator and immediately examine the indicator display screen.
- If the display presents a “✓”, no alarms have been activated during the trip (Figure 1).
- If the display presents an “X”, an alarm has been activated.
 - If the display presents “HI”, the high temperature alarm (>) has been activated. (Figure 2).
 - If the display presents “LO”, the low temperature alarm (<) has been activated. (Figure 3).
- If both HI and LO alarms are activated or the indicator operation life has expired, the display will present “:” on the right side of the display. (Figure 4).

Figure 2



Figure 3



Figure 4

