

VizComm™ F5

Activation Guide



sensitech.com



Sensitech Inc. Global Headquarters • 800 Cummings Center, Suite 258X • Beverly, MA 01915-6197
+1-800-843-8367 • +1-978-927-7033 • Fax 978-921-2112 • sensitech.clientservices@carrier.com
© 2020 Carrier. All Rights Reserved.




T83006676 Rev. B • 1 Oct 2020

VizComm™ F5 Bundle Activation Guide

Activating the VizComm F5

1. Locate the loose red/black lead from the battery.
2. Locate the loose red/black lead from the Tracking device.
3. Match the orientation of the connectors and attach. If device does not turn on automatically, follow instructions on back to power on.
4. Tuck leads into case and then close case (make sure leads are not being pinched when closing).

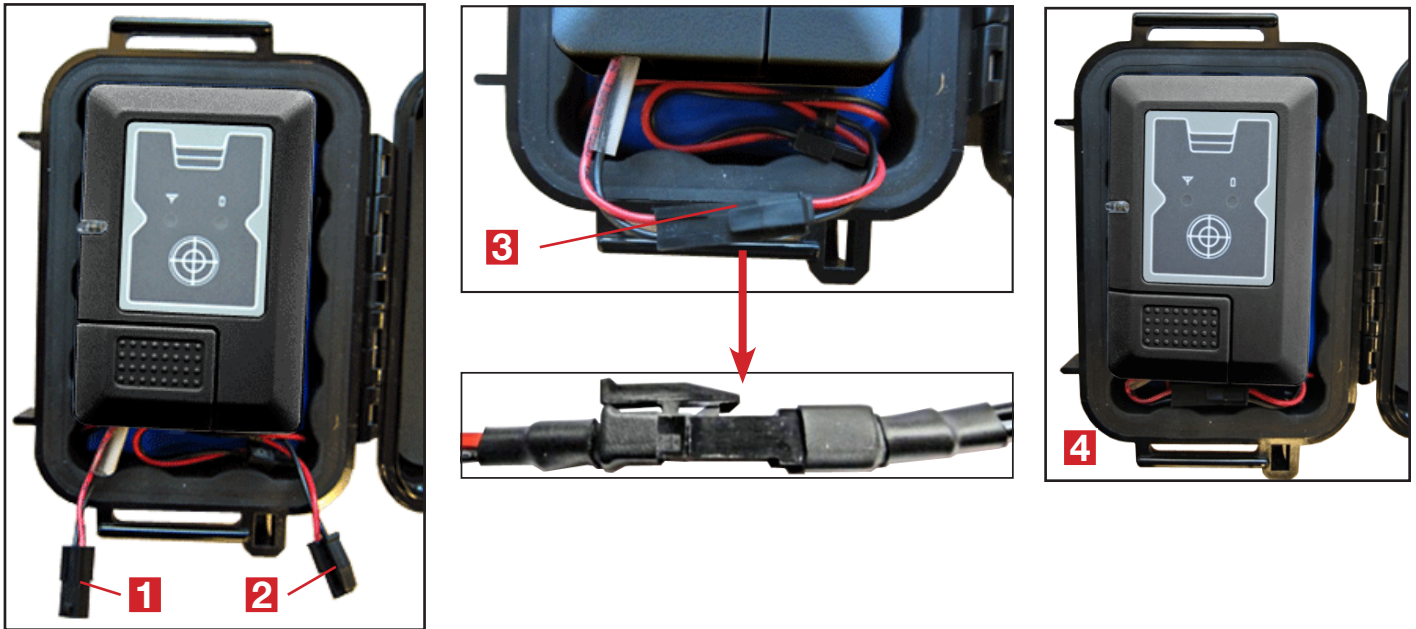

Turning On the VizComm F5

1. Power on by lightly pressing the crosshairs button (A) for 5 seconds, then releasing.
2. LED Lights (B) will be solid **GREEN** for 4 seconds then will flash indicating the device is powered up.

Turning Off the VizComm F5

1. Power off by pressing the crosshairs button for 4 seconds.
2. LED lights will flash **RED**. Release button as device powers off (3-5 seconds.)

Check Status

Tap the crosshairs button to check cell signal strength (C) and battery (D).
If the LED lights display do not blink, the device is off.

- GREEN** — >90% battery left
- AMBER** — 50-90% battery left
- RED** — < 50% battery left

